

Beede Electrical Instrument Company, Inc. 88 Village Street, Penacook, NH 03303-8910 Phone: (603) 753-6362 FAX: (603) 753-6201

Since 1917 Visit our WEB site http://www.beede.com ISO 9001 CERTIFIED

AGRICULTURAL •

AUTOMOTIVE •

INDUSTRIAL •

MARINF •

PIN 2-

Beede Electrical Instrument Co., Inc. warrants all instruments and accessories free from all defects in workmanship and materials on gauges that are less than

WARRANTY

PIN 3

three (3) years old or have been in service fewer than two TRUCK •

(2) years and, at no charge, will replace or repair at BUS . Beede's option all instruments that fail. Contact Beede for complete details.

LAMP

# 3" System Check Tachometer Installation Instructions

# WARNING

Improper installation may damage the instrument and/or cause injury to the installer. If you have installation questions, please contact the factory.

Disconnect battery cables before installing the instrument.

Check for obstructions behind dash panel such as wires and hoses before cutting the mounting hole for the instrument.

#### MOUNTING

Recommended dash hole size: 3.380±.015 in (85.85±0.38 mm) DIA Secure the instrument into dashboard with mounting "J" clamp and Kep nuts.

If dashboard thickness exceeds clamp grip range, clamp legs may be shortened. Position instrument in dash board prior to tightening clamp nuts to recommended

Maximum recommended tightening torque for all hardware: 6 lb-in (0.68 N-m).

Caution, over tightening mounting hardware may damage the instrument.

## MAINTENANCE

Periodically check and torque all hardware per mounting specifications. Clean glass with a soft, damp, clean cloth.

### THANK YOU!

547561 REV A


Thank you for purchasing a Beede instrument. Our instruments are made for you in the U.S.A. Visit our WEB site at www.beede.com or contact customer service for information on this or other Reede instruments

 
KEP NUT

MOUNTING "J" CLAMF

torque.	
J	
	Integral 8 position connector mates with Deutsch I.P.D. DT Series connector DT06-8S.

#### Instrument Wiring Table Pin Number Connection Name Battery + 2 Ground 3 Tachometer Signal 4 No Oil 5 Low Oil 6 Temperature Check Engine 7 8 Horn

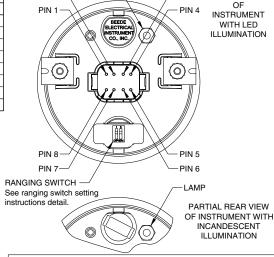



**SWITCH POSITION 2** SHOWN IN THE CLOSED POSITION

**REAR VIEW** 

RANGING SWITCH SETTING DETAIL