



**WARNING**

Improper installation may damage the instrument and/or cause injury to the installer. If you have installation questions, please contact the factory. Disconnect battery cables before installing the instrument. Check for obstructions behind dash panel such as wires and hoses before cutting the mounting hole for the instrument.

**Installation**



Recommended dash hole size: 2.125±.015 in (53.98±0.38 mm) DIA. Secure the instrument into dashboard with mounting "J" clamps and Kep nuts. If dashboard thickness exceeds clamp grip range, clamp legs may be shortened. Position instrument in dashboard prior to tightening clamp nuts to recommended torque. Maximum recommended tightening torque for all hardware: 6 lb-in (0.68 N-m).

Caution, over tightening mounting hardware may damage the instrument.

**Maintenance**

Periodically check and torque all hardware per mounting specifications. Clean glass with a soft, damp, clean cloth.

**Wire Connections**

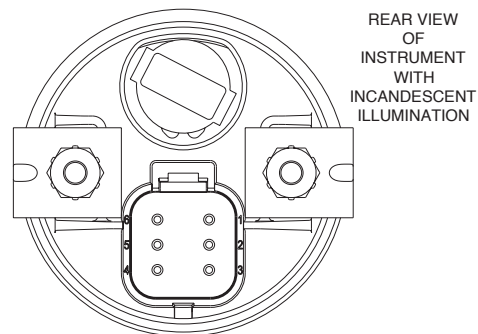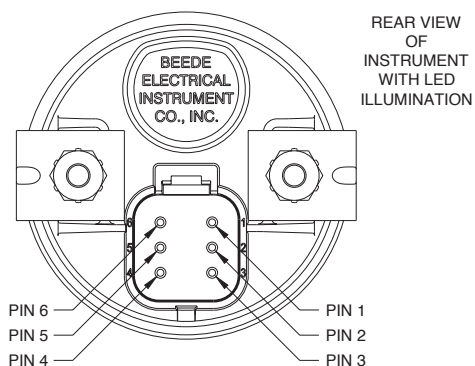

| Gauge Pin Number | Connection Name |               |
|------------------|-----------------|---------------|
|                  | Standard Gauge  | Voltmeter     |
| 1                | Battery +       | Battery +     |
| 2                | Ground          | Ground        |
| 3                | Sender Signal   | No Connection |
| 4                | Lamp (B+)       | Lamp (B+)     |
| 5                | No Connection   | No Connection |
| 6                | Alarm Ouput     | Alarm Output  |

Alarm Output = 150mA DC to ground

